

Video recorder for Siemens SX1

User Guide

Trademarks

PacketVideo, the PacketVideo logo pv3, pv3 Mobilemedia System, pvAuthor, pvPlayer, and pvServer are trademarks of PacketVideo Corporation. Other product names, logos, designs, titles, words or phrases mentioned within this user guide may be trademarks, service marks or tradenames of PacketVideo Corporation or other third parties and may be registered in the U.S. or other jurisdictions.

PACKETVIDEO CORPORATION MAKES NO WARRANTIES, EITHER EXPRESS OR IMPLIED, REGARDING THE ENCLOSED COMPUTER SOFTWARE, ITS MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. THE EXCLUSION OF IMPLIED WARRANTIES IS NOT PERMITTED BY SOME STATES. THE ABOVE EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY PROVIDES YOU WITH SPECIFIC LEGAL RIGHTS. THERE MAY BE OTHER RIGHTS THAT YOU MAY HAVE WHICH VARY FROM STATE TO STATE.

Copyright

Copyright © 2000-2003 PacketVideo Corporation. All rights reserved. This manual may not be copied, photocopied, reproduced, translated, or converted to any electronic or machine-readable form in whole or in part without prior written approval of PacketVideo Corporation.

PacketVideo Corporation

www.packetvideo.com

Part number: 012.E0.0610.00

Table of Contents

- Introducing Video recorder* 4**
- About PacketVideo*..... 4**
- Using Video recorder* 5**
- General Navigation 5**
 - Views* 5
- Starting Video recorder application..... 6**
- Recorder View 6**
 - Recording a video clip*..... 6
 - Pause recording* 7
 - Stop recording*..... 7
 - Playing your video clip* 7
 - Adding audio to your video clip* 7
 - Status display*..... 7
 - Options menu before recording a clip* 8
 - Options menu and shortcut keys after recording a clip* 8
- Playback view..... 9**
 - Playing a video clip* 9
 - Pausing and resuming clip playback*..... 9
 - Adjusting the clip position*..... 9
 - Adjusting the volume*..... 10
 - Viewing the video in full screen*..... 10
 - Options menu and shortcut keys during playback*..... 11
- Clips view 11**
 - Managing your clips* 11
 - Options menu and shortcut keys in Clips view*..... 12
 - Opening a clip for play* 12
 - Sending clips*..... 12
 - Delete, Rename and Move video clips*..... 12
 - Marking multiple clips*..... 12
- Settings..... 13**
 - Record settings* 13
 - Playback settings* 13
 - Clip info settings*..... 14
 - Advanced settings*..... 14
- More PacketVideo products* 15**

Introducing Video recorder

Welcome! Now you can create wireless multimedia content using PacketVideo mobilemedia technology on your Siemens SX1 phone. Use Video recorder software to record and play clips directly from your device.

See ***Using Video recorder*** on the next page to learn more about the Video recorder software.

About PacketVideo

PacketVideo is the world's leading provider of software that enables mobilemedia today. PacketVideo's pv3 Mobilemedia System™, including pvPlayer, delivers the highest quality media experience possible in every mobile environment. PacketVideo technology enhances communications, information, entertainment, and security for consumer and business customers, enabling the delivery of high-quality audio, video, animation and graphics for an enriching and productive user experience.

Using Video recorder

General Navigation

Views

With the Video recorder you can:


- Record new video-clips in the Recorder view
- View recorded video-clips in the Playback view and
- Manage your video-clips in a Clip list.



Figure 1 - Siemens SX1

Starting Video recorder application

You will find the Video recorder application in the main menu folder “Camera”. Select the Video icon to open Video recorder in the Recorder view.

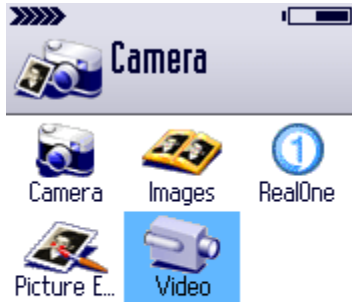

Options Back

Figure 2 - Video recorder application

Recorder View

Recording a video clip

Video recorder displays a preview image from your camera. When you are ready to record a video clip, **press the selection key**.

You may also begin recording from the **Options** menu and selecting the **Record** menu item.

Notice the two soft keys change to **Pause** and **Stop** while you are recording.

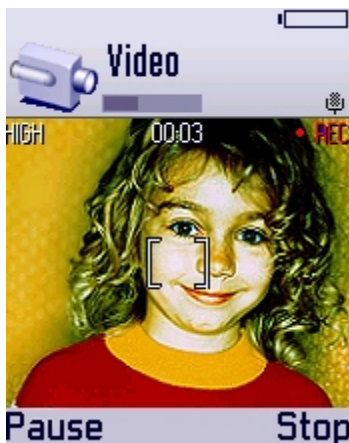


Figure 3 - Recording a video clip

Pause recording

You may momentarily pause recording in two ways:

1. Press the left soft key called **Pause**.
2. Press the selection key.

Notice the left soft key changes to **Resume**. Resume recording your clip by again pressing any of the two keys above.

Stop recording

When you are finished recording your clip press the right soft key called **Stop**. Your video clip is automatically saved. The amount of time it takes to save your clip depends on the length of your recording.

Playing your video clip

Play your clip immediately by pressing the left soft key called **Options**. Use your scroll down key to highlight and select the option **Play clip**.

Your clip will automatically begin playing in the Playback View. When you are finished viewing the clip, press the right soft key **Back** to return to the Recorder View.

Now that you understand the basics of recording and playing a video clip, let's look at some of the more advanced features of the Recorder View.

Adding audio to your video clip

You may record up to 60 seconds of audio with your video clip. Notice the Options menu item **Set audio off**. Recording video without sound reduces the storage space a clip needs and allows you to create longer video clips. To enable audio recording again, select the Options menu item **Set audio on**.

The audio recording option may also be changed from the Recording settings dialog. See **Settings** for more information.

Status display

You may notice that status information is displayed in the Recorder View. Toward the top of the screen a progress bar graphically displays the remaining file size of your clip. You may adjust the maximum clip file size in the Advanced settings dialog. See **Settings** for more information.

Next to the progress bar is the Audio status icon. Notice that the icon changes depending on your audio selection.

Video recorder displays recording status in an overlay above the video preview. Positioning lines are also provided to help you center the subject matter.

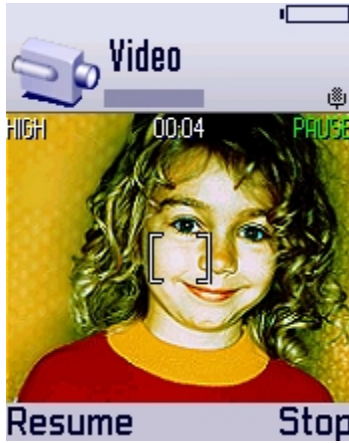


Figure 4 – Recording status display

The top left of the display overlay indicates the recording quality setting. The top centermost displays the recording time. And the top right displays the current recording state.

The display overlay may be turned off from the Advanced settings dialog. See **Settings** for more information.

Options menu before recording a clip

Before recording a clip, the **Options** menu offers you the following commands:

Menu item	Action
Record	Starts recording
Go to clips	Opens the Clips view
Set audio on Set audio off	Toggles audio capture on or off
Settings	Opens the Settings dialog
About	Opens the About dialog
Exit	Exits the Video application

Options menu and shortcut keys after recording a clip

After you have finished recording a clip, the **Options** menu offers the following commands:

Menu item	Action	Shortcut key
New clip	Begins a new recording session	
Play clip	Opens the Playback view where playback of the clip begins	
Go to clips	Opens the Clips view	
Delete	Prompt to delete the clip	Clear key
Send	Send as multimedia, email, infrared, Bluetooth	Send key
Rename clip	Prompt to rename the clip	
Settings	Opens the Settings dialog	
About	Opens the About dialog	
Exit	Exits the Video application	End key

Playback view

Playing a video clip

Play your video clip immediately after it is saved from the Recorder View by selecting **Play clip** from the **Options** menu.

You may also play previously saved clips from the Clips View. See *Managing your clips* for more information.

Your clip will automatically begin to play when the Playback View is opened.



Figure 5 - Playing a video clip

Notice that during playback the left soft key is **Pause** and the right soft key is **Stop**.

Pausing and resuming clip playback

Pause playback of the video clip by pressing the left soft key **Pause**. Notice that the left soft key changes to **Play**.

You may also pause and resume playback by using the selection key.

Adjusting the clip position

Fast forward and fast rewind to any position in the video clip by using the up and down scroll keys.

Press and hold the down scroll key to fast rewind, or the up scroll key to fast-forward. Notice that a progress bar appears above the video that indicates the clip position relative to the length of your clip. Also, notice the time changes while adjusting the clip position. Release the scroll key to begin playback in the new clip position.



Adjusting the volume

Adjust the volume by pressing the left and right scroll keys. Note that the volume control is only visible if your video clip contains audio.


Press scroll right to increase the volume level, or scroll left to decrease the volume level.



Viewing the video in full screen

View your video clip full screen in landscape. The video clip is expanded to completely fill the phone display. The battery and signal strength indicators will still be visible.

Activate full screen by pressing ***any numeric key***. Return to normal portrait orientation by pressing a numeric key again.

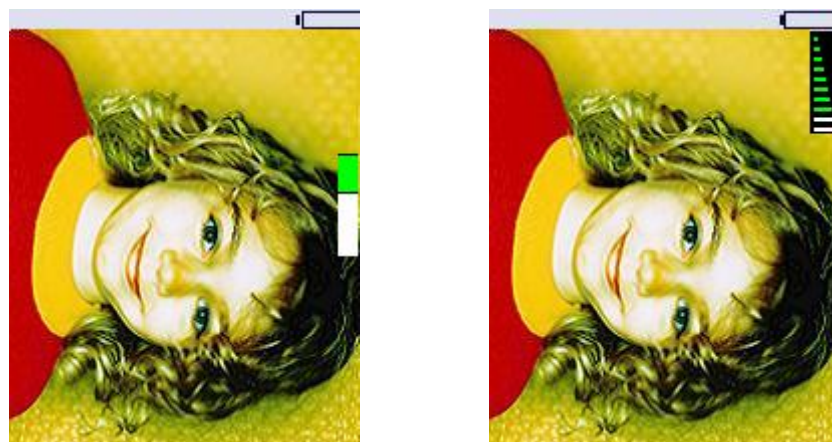

You can still adjust the clip position and volume while viewing in full screen. The clip position and volume scroll keys are rotated to the full screen view. Press the scroll key up and down to adjust the clip position. Press the scroll key left and right to adjust the volume. The clip position bar and volume control will momentarily appear over the video.

Automatically view your clips in full screen by setting the Full screen Playback setting to ***automatic***. See ***Settings*** for more information.

Options menu and shortcut keys during playback

After clip playback is stopped, the **Options** menu offers the following commands:

Menu item	Action	Shortcut key
Play	Begins playback of the clip	Selection key
Properties	Opens the clip Properties dialog	
Send	Displays Send As submenus	Send key
Delete	Prompt to delete clip	Clear key
Settings	Opens the Settings dialog	
About	Opens About dialog	
Exit	Exits the Video application	End key

Clips view

Managing your clips

Open the Clips View from the Recorder View by selecting **Go to clips** from the **Options** menu.

The video clips stored on your phone or external multimedia card are listed in the Clips View.

Clips stored on the multimedia card display an icon next to the clip file name. 

Note: The external multimedia card should not be removed or inserted while Video is open.

Video clips are sorted in the Clips View by time and date of creation. So, the last clip you make is always on the top of the list.



Figure 6 - Clips view dialog

Notice that video clips are automatically assigned a unique file name. You may customize the base file name of your clips from the Advanced settings by changing the *Clip name*. See **Settings** for more information.

Options menu and shortcut keys in Clips view

The Clips view **Options** menu offers the following commands:

Menu item	Action	Shortcut key
Play	Begins playback of the clip.	Selection key
File	Opens the File sub-menus. File sub-menus are: Delete Rename Move to mem. card / Move to phone mem	
Send	Displays Send As submenus	Send key
Mark / Unmark	Selects one or more clips for an action	Edit key
Properties	Opens the clip Properties dialog	
Settings	Opens the Settings dialog	
About	Opens About dialog	
Exit	Exits the Video application	End key

You may also delete a clip by pressing the **Clear** key.

Opening a clip for play

Use the up and down scroll keys to highlight a clip for playback and press the **selection key**, or by selecting **Play** from the **Options** menu.

Sending clips

Video clips may be attached to outgoing messages or beamed to another device. Your phone is capable of sending a video clip by MMS, e-mail, infrared and Bluetooth. You must first configure the Messaging application on your phone with a multimedia and e-mail connection before you can send as MMS and e-mail.

Use the left soft key called **Options** and select the **Send** menu.

Delete, Rename and Move video clips

Video clips may be deleted or renamed from the **File** menu. Use the up and down scroll keys to highlight the video clip then press the left soft key called **Options** and select the **File** menu (delete, rename, move). If you have an external multimedia card inserted you may also move the highlighted clip to the multimedia card or phone memory. You may also delete a clip by pressing the **Clear** key.

Marking multiple clips

You may mark multiple clips to perform an action on all marked items at once. Use the left soft key called **Options** and select the **Mark** menu. You may mark, unmark, mark all or unmark all clips from the sub menus. The following actions may be performed on a group of marked clips:

Menu item	Action
Delete	Delete multiple clips
Move to mem. card	Move multiple clips to the multimedia card
Move to device memory	Move multiple clips to the phone memory
Send	Send multiple clips by MMS, e-mail, infrared or Bluetooth

As a shortcut, you can keep the **Edit** key pressed while using the navigation and Selection keys in the following way:

- Pressing a scroll key (up or down) while holding Edit marks both the current item and the one onto which the focus moves. If you hold down the Edit and scroll further in the same direction, all the scrolled items become marked; to unmark the items in reverse order you can scroll into the opposite direction while keeping Edit down.

Settings

You may change Video recorder settings from any of the views. Use the left soft key called **Options** and select the **Settings** menu item.

Video recorder settings are arranged in four tabs

1. Record settings
2. Playback settings
3. Clip info settings
4. Advanced settings

Record settings

Select Record settings to control how your video clip will be created. You may adjust the quality of your video clip, add audio, or save the video clip to the multimedia card.

The high quality setting will normally produce a better video clip, but the video clip will take more storage space on your phone or multimedia card.

Adding audio to your video clip will also increase the storage space requirements and may also result in a slower frame rate.

The storage location may be set to your phone memory or multimedia card (if inserted).



Figure 7 - Record settings dialog

Playback settings

Select Playback settings to control how your video clip will be displayed. You may adjust the volume, loop video clip play, or automatically play the video clip in full screen.

The volume setting adjusts the phone volume level. Please be careful not to adjust the volume level too high when using headphones.

The repeat clip setting continuously loops video clip playback to the beginning.

The full screen setting automatically displays the video clip in full screen landscape when the video clip begins. The numeric keys will still let you switch between full screen and normal portrait display as before.

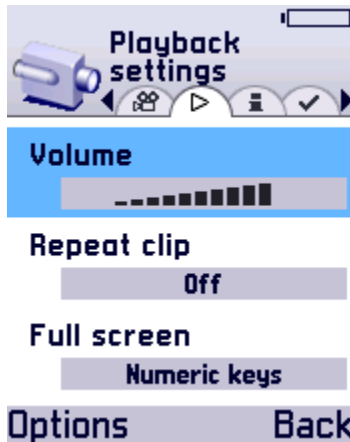


Figure 8 - Playback settings dialog

Clip info settings

Select Clip info settings to add personalized text to your video clip. The clip information is displayed in Video recorder clip properties and other compatible video players.

The clip information you provide will automatically be added to every video clip you create. You may add a Title, Author, Copyright, Rating, or Description to the video clips you create.

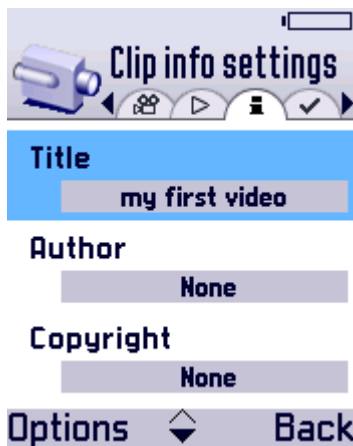


Figure 9 - Clip info settings dialog

Advanced settings

Select Advanced settings to control the recorder display, video clip name, or limit the video clip file size.

The overlay viewfinder setting controls the status display overlay in the recorder view. Turn the display overlay off if you do not wish to see the status information as you record.

The clip name setting allows you to control the automatic file name of your video clips. Each video clip is sequentially numbered with this basic clip name you provide.

The max file size setting lets you limit the size of your video clips. You may adjust the maximum file size from a default of 95 KB (clips up to this size may be sent via MMS), or set it to maximum.

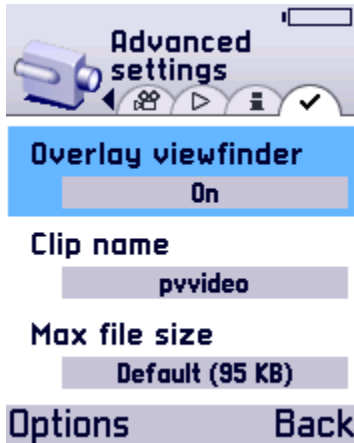


Figure 10 - Advanced settings dialog

The maximum available size of your video clip depends on the available space of your storage location. See the **Clip store** setting under the **Record settings** tab.

When audio is added to your clip the maximum recording time is 60 seconds. A video clip without audio is a maximum up to 2 megabyte in size.

More PacketVideo products

We hope you enjoy Video recorder for your Siemens SX1 phone. PacketVideo offers many more products for all your mobile multimedia needs. Visit www.pv.com/shop today.